

# Exhaust Fume Hood

© Copyright 2010 Terra Universal Inc. All rights reserved. • Revised September 2010



## Your Comprehensive Equipment Source





# Exhaust Fume Hood

## Proprietary Notice

This manual pertains to proprietary devices manufactured by Terra Universal, Inc. Neither this document nor any portion of it may be reproduced in any way without prior written permission from Terra Universal.

Terra Universal makes no warranties applying to information contained in this manual or its suitability for any implied or inferred purpose. Terra Universal shall not be held liable for any errors this manual contains or for any damages that result from its use.

## Safety Notice

A thorough familiarity with all operating guidelines is essential to safe operation of the product. Failure to observe safety precautions could result in poor performance, damage to the system or other property, or serious bodily injury or death.

The following symbols are intended to call your attention to two levels of hazard involved in operation:



CAUTION

Cautions are used when failure to observe instructions could result in significant damage to equipment.



WARNING

Warnings are used when failure to observe instructions or precautions could result in injury or death.

The information presented here is subject to change without notice.

## 1.0 Introduction

This manual provides information on installing and operating your Terra Universal Hand Exhaust Fume Hood.

By studying this document carefully, you can be assured of a long, efficient service life from the unit.

## 2.0 Description

Terra Universal's Exhaust Fume Hood frame is fabricated from powder-coated 16-gauge C.R. steel 1.5" x 3" tubing to ensure sturdy support for the exhaust fume hood. The frame also isolates the hood (and any vibrations the hood causes) from the work surface.

The hood features a 10" round discharge; this allows easy connection to your in-house exhaust system to provide the internal negative pressure necessary to safely remove fumes from the work surface. Other sizes are provided on a custom basis.

Side panels made of transparent PVC ensure that no fumes escape from beneath the hood while allowing full visibility from the side and eliminating the claustrophobic feeling operators often experience in an all-stainless steel enclosure.

The front of the unit features an easy-glide sliding shield (also made of transparent PVC mounted in an epoxy-coated aluminum frame). Because this front shield is counterweighted, it can be positioned at any place you desire to restrict or open up access to the work area. You can even modify the shield to accommodate protruding process equipment or an operator's arms. Extending it downwards effectively increases the negative pressure under the exhaust hood and reduces the chance of fumes escaping into the surrounding area. Because it is transparent, this shield affords full visibility of the entire work surface, even when fully extended. Extension below hood: 35" (fully extended); 8" (fully retracted)





# Exhaust Fume Hood

## 3.0 Installation


The Exhaust Fume Hood ships fully assembled, standard. However, it may ship in two parts at the customer's request or due to a custom order.

If the unit requires assembly upon receipt, the following procedure is to be used:

### Items you will need:

- Forklift or other heavy-lift device (recommended).
- 100" of vertical clearance between assembly area and location of use.
- 120 VAC, 60 Hz or 240VAC 50/60Hz grounded power receptacle, as ordered.

1. Uncrate your Exhaust Fume Hood, checking to make sure that it has no visible damage incurred during shipment. If damage is found, contact the freight company to file a damage claim immediately.
2. Mount the frame onto the provided maneuvering casters.
3. Remove the rear panel for easier mounting of the main housing.
4. Using a forklift or other heavy-lifting device, lift the housing assembly above the frame. Adjust the frame so that it lines up with the main housing's attachment points (screws that are sticking out on top of the frame).
5. Carefully lower the main housing onto the frame, ensuring that all attachment points are properly aligned before joining the two parts.
6. Maneuver the assembly into its final operational location, ensuring that it is on a flat and level surface. Once situated in-place, remove the maneuvering casters and rest the frame upon the ground. Make sure that the unit is installed within reach of an appropriate power outlet.

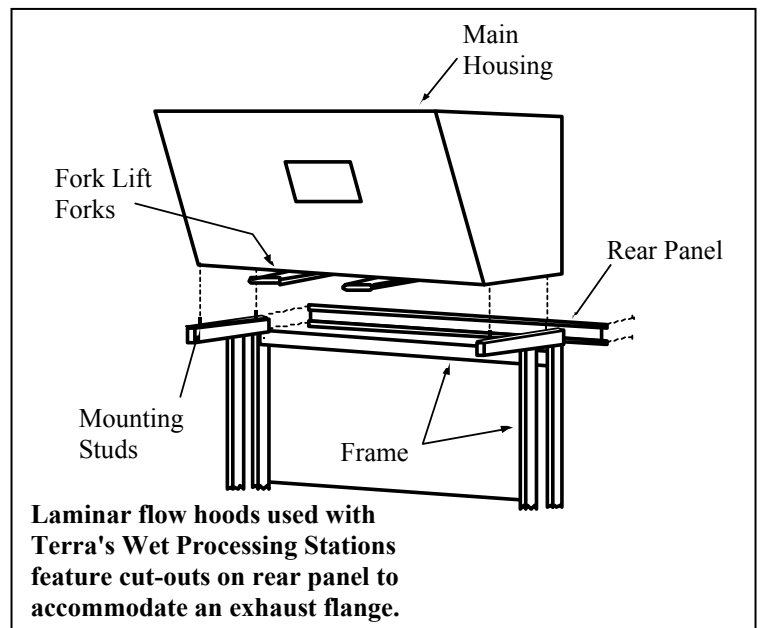

NOTE

The maneuvering casters are to be used for **INSTALLATION ONLY**. Please remove the casters from the unit once you have moved it into its final position. Retain the casters for any future relocation needs.

7. Plug the unit in. The unit is now ready for use



# Exhaust Fume Hood

## 4.0 Operation

Based on the specifications provided for your Exhaust Fume Hoods, the only electric function installed in the unit is the Vapor-Proof Illuminator. All that is necessary to turn on the light is to plug the wire at the top left of the unit to a 120V or 240V outlet and flip the switch at the right side.

## 5.0 Maintenance

Terra Universal's Exhaust Fume Hoods should be cleaned with a mild, nonabrasive detergent and water. Special care should be taken not to damage the surface coatings of hoods made of Static Dissipative PVC; surface scratches can reduce the static dissipative properties of this material.

The 4' 40-watt fluorescent bulbs in the Vapor-Proof Illuminator can be replaced without the use of any tools. Simply unfasten the snaps holding the lens in place and carefully remove it. After turning the bulb 90 degrees, it should detach easily.

**WARNING:** Make sure that the unit is turned off and that the lights have cooled before attempting to replace a bulb.

## 6.0 Filter Replacement

Charcoal and HEPA final filters can be replaced from beneath the hood (refer to illustrations):



1. Using a flat blade screw driver, loosen the two captive retaining screws that hold the filter cover in place. Be sure to support the cover as you remove the screws.
2. Once the screws are removed, allow the support cover to swing downward.

**CAUTION:** Use care to support the filters, which may fall loose once the cover is open. Carefully remove the charcoal filter and optional final HEPA filter, and reinstall replacement filters in the same orientation.

### Replacement Filters:

Activated Charcoal  
HEPA Final Filter

Cat. No. 1716-00A  
Cat. No. 1681-02

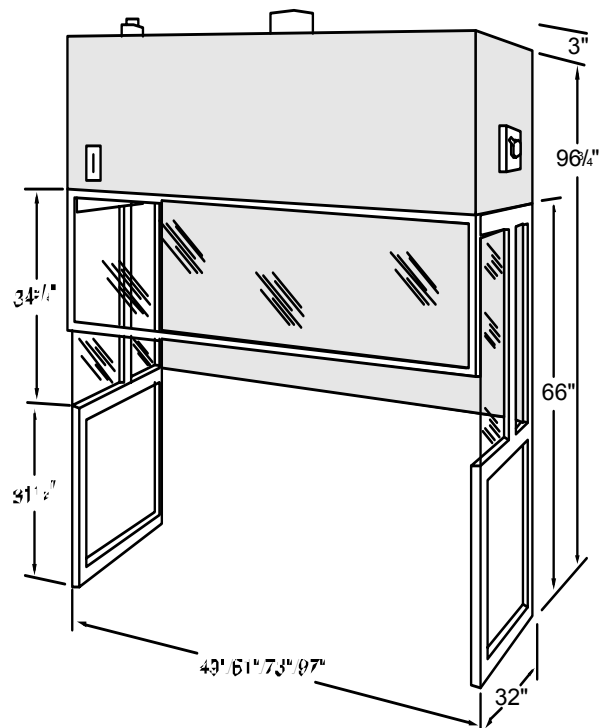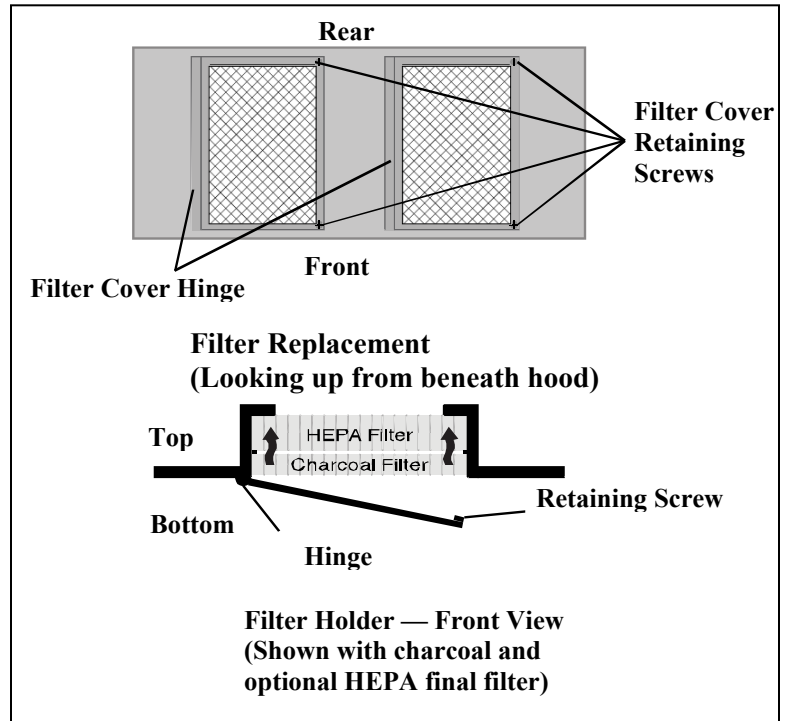



# Exhaust Fume Hood

## 7.0 Specifications

General Construction:	The station is fabricated from welded 16-gauge Cold Rolled steel 1 1/2" x 3" frame tubing. Hood is available in powder-coated steel or stainless steel.
Dimensions:	100"H (including damper) x 49"/61"/73"/97"W x 32"D
Frame Finish:	Chip-resistant, white powder-coat, semigloss.
Standard color:	White. (Hood also available in stainless steel.)
Side Panels:	Transparent PVC





## 8.0 Warranty

**Products Manufactured by Terra:** Terra Universal, Inc., warrants products that it manufactures to be free from defects for a period of 12 months for parts and 90 days for labor, commencing from the date of shipment. Terra's sole responsibility is to repair or replace, at its option, any part of the product that proves defective or malfunctioning during this time limit. In some cases, components incorporated in Terra Universal products are covered by additional warranties from component manufacturers; obtain specific information from Terra sales representatives. This warranty is void if the equipment is abused or modified by the customer, is operated outside Terra's operating instructions or specifications, or is used in any application other than that for which it is specified. This warranty does not include routine maintenance or service procedures, breakage of quartz baths after 60 days, shipping damage, nor damage from misuse, intentional or unintentional abuse, neglect, natural disasters, or acts of God.

**Products Manufactured by Others:** Terra Universal, Inc., warrants that, to the best of its ability, Terra's representations of products that are manufactured by others reflect the manufacturer's representations, subject to change without notice. Sole warranty for these products is the original manufacturer's warranty that is passed forward to the purchaser and constitutes the customer's sole remedy for these products. Detailed warranties for distributed products are available through Terra sales representatives.

**Freight Shortage or Damage:** Upon receipt of any equipment from Terra Universal, Inc., customer shall immediately unpack and inspect for damage or shortage. The customer shall not accept a damaged package or a short shipment until the carrier makes a "damage or shortage" notation on both the carrier's and customer's copy of the freight bill or delivery receipt. Service title passes when the shipment is loaded, so customer is responsible for filing and collecting a freight claim. Any replacement products must be ordered and paid for separately. For Terra's "Policy and Procedures for Returning Goods," see Terra's Internet site: [www.TerraUniversal.com](http://www.TerraUniversal.com).

Generally, customers can improve the chance of collecting on a freight claim by following these procedures: 1) formally requesting that the carrier inspect the shipment immediately upon suspecting damage or shortage to verify condition; 2) notifying the carrier upon discovery of concealed damage and requesting an inspection within 15 days of receipt, both in person or phone and following up via mail; 3) keeping the shipment as intact as possible, including retaining original packaging materials and keeping the product as close to the original receiving location as possible; 4) holding salvage for disposition by the carrier.

**All Claims:** Terra Universal expressly disclaims all other warranties, expressed or implied or implied by statute, including the warranties of merchantability or fitness for intended use. Terra Universal is not responsible for consequential or incidental damages arising out of the purchase or use of the products supplied by Terra Universal. Terra Universal is not liable for damage to facilities, other equipment, products, property or personnel of others, or of their agents, suppliers, or affiliated parties, which is caused or alleged to have been caused by products supplied by Terra Universal. In any event or series of events, Terra Universal's total liability for any and all damages whatsoever is limited to the lesser of the actual damages or the original invoice cost of the items alleged to have caused the damage. The customer's sole and exclusive remedy for any cause of action whatsoever is repair or replacement of the non-conforming products or refund of the actual purchase price, at the sole option of Terra Universal. All claims must be made in writing within 90 days of the date the product was shipped. Any claims not made within this time limit shall be deemed waived by the customer. Terra Universal is not responsible for any additional costs of repair caused by poor packaging or in-shipment damage during return.

**Warranty Returns:** All warranty returns must be authorized in advance by Terra Universal and approved under an RMA. Unless approved in advance for good reason, all returns must be in original condition, including all manuals, and must be packaged in original packaging materials. All returned goods are to be shipped to Terra Universal, freight prepaid at customer's expense. See Terra's "Policy and Procedure for Returned Goods."

*Thank you for ordering from  
Terra Universal!*